

Information Menu

- [Information] - Main - Advanced - Security - Boot - Exit -

```

CPU Type      Intel(R) Pentium(R) 4 Mobile CPU X.XXGHz
CPU Speed     xxxx MHz
System Memory:  xxx KB
Extended Memory:  xxxxx KB
HDD1 Serial Number  xxxxxxxxxx
HDD2 Serial Number  None
System BIOS Version  R01-xx
VGA BIOS Version  x.xx.xx
KBC Version     xx.xx.xx
Serial Number    xxxxxxxxxxxxxxxxxxxxxxxxxxxx
Asset Tag Number  FLORA 270WNV8/NV9
Product Name     HITACHI
Manufacture Name  xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx
UID Number       xxxxxxxx-xxxx-xxxx-xxxx-xxxxxxxxxxxx
LAN Device       Exist (MAC Address = xx:xx:xx:xx:xx:xx)
  
```

Information Menu

	BIOS default	BIOS value
CPU Type		Intel(R) Pentium(R) 4 Mobile CPU X.XXGHz
CPU Speed		XXXX MHz
System Memory		XXX KB
Extended Memory		XXXXXX KB
HDD1 Serial Number		XXXXXXXXXX
HDD2 Serial Number		None
System BIOS Version		R01-XX
VGA BIOS Version		XX.XX
KBC Version		XX.XX.XX
Serial Number		XXXXXXXXXXXXXXXXXXXXXXXXXXXX
Asset Tag Number		
Product Name		FLORA 270WNV8/NV9
Manufacture Name		HITACHI
UUID Number		XXXXXXXX-XXXX-XXXX-XXXX-XXXXXXXXXXXX
LAN Device		Exist (MAC Address =XX:XX:XX:XX:XX:XX)

```

CPU Type  CPU
CPU Speed CPU
System Memory
Extended Memory
HDD1 Serial Number HDD1
HDD2 Serial Number HDD2
System BIOS Version BIOS
VGA BIOS Version VGA BIOS
KBC Version KBC BIOS
Serial Number
Asset Tag Number Asset Tag
Product Name
Manufacture Name
UUID Number
LAN Device LAN
  
```

Main Menu

- Information - [Main] - Advanced - Security - Boot - Exit -

```

System Time:  [xx:xx:xx]
System Date:  [xx/xx/xxxx]

Boot Display  [Both]
Screen Expansion  [Disabled]

QuickBoot Mode:  [Enabled]
Startup Screen  [Disabled]

Boot on LAN  [Disabled]
Hotkey Beep  [Enabled]

Auto Dim  [Enabled]
F12 Multi-Boot  [Enabled]
  
```

Main Menu

	BIOS default	BIOS value
System Time		XX:XX:XX [00] 23/[00] 59/[00] 59
System Date		XX/XX/XXXX [01] 12/[01] 31/[XXXX]
Boot Display	Both	Auto
Screen Expansion	Disabled	Enabled
QuickBoot Mode	Enabled	Disabled
Startup Screen	Disabled	Enabled
Boot on LAN	Disabled	Enabled
Hotkey Beep	Enabled	Disabled
Auto Dim	Enabled	Disabled
F12 Multi-Boot	Enabled	Disabled

```

System Time
System Date
Boot Display  Both
Screen Expansion
QuickBoot Mode
Startup Screen Disabled POST
Boot on LAN
Hotkey Beep [Fn]-(F4)
Auto Dim
F12 Multi-Boot F12
  
```


■ Advanced Menu ☒ ☐ ☐ ☐ ☐ ☐ ☐

```

- Information - Main - [Advanced] - Security - Boot - Exit -
Legacy Diskette A: [1.44/1.25MB 3 1/2"]
▼ Primary Master [H TACHI _DK23CA-30]
▼ Secondary Master [None]
▼ Onboard Device Configuration
Wake on LAN from S5 [Enabled]
Reset Configuration Data [No]
CPU Power Management Mode [Auto]
AC Powered [Mix Performance]
Battery Powered [Mix Batt.]
Embedded Share Memory [16M]

```

Advanced Menu		BIOS default	BIOS value
Legacy Diskette A:	1.44/ 1.25MB 3 1/ 2"	Disabled	
Primary Master		[HITACHI DK23CA- 30]	
Secondary Master		None	
OnBoard Device Configuration			
Wake on LAN fromS5	Enabled	Disabled	
Reset Configuration Data:	No	Yes	
CPU Power Management Mode	Auto	Disabled	
AC Powered	Max Performance	Batt Optimized/ Max Batt/ Automatic	
Battery Powered	Max Batt	Automatic/ Max Performance/ Batt Optimized	
Embedded Share Memory	16M	32M	

```
Legacy Diskette A: 000000 AC 00 0000 FD 000000 00 0000
Primary Master 0 (Primary Master) 00 0000 0000
Secondary Master 0000 000000 0000000000000000000000
OnBoard Device Configuration 00000000 00000000 0000000000
Wake on LAN from S5 00000000 00 00000000 00 00000000
Reset Configuration Data 0000 000000 000000 00 0000
CPU Power Management Mode 0 CPU 00 0000 000000
AC Powered 0 AC 00 00 CPU 00000000 000000
Battery Powered 0 Battery 0000 CPU 00 000000 000000
Embedded Share Memory 000000000000 00000000
```

■ IDE Primary Master Information ■ HDD ■ ■ ■ ■ ■

```
-[Advanced]-
----- Primary Master [xxxxx]-----

Type:                                [Auto]

Multi-Sector Transfers:              [16 Sectors]
LBA Mode Control:                    [Enabled]
32 Bit I/O                           [Disabled]
Transfer Mode:                       [Fast PIO4]
Ultra DMA Mode:                      [Mode 5]
```

Primary Master Information		BIOS default	BIOS value
Type	Auto	Auto	
Multi-Sector Transfers			
LBA Mode Control			
32 Bit I/O			
Transfer Mode			□ □ □ □ □ □ □ □
Ultra DMA Mode			

[illegible]

■ IDE Secondary Master Information □ □ □ □ □ □ □ □ □ □

```

-[Advanced]-
----- Secondary Master [xxxxx]-----

Type:                                [Auto]

Multi-Sector Transfers:              [Disable]
LBA Mode Control:                    [Disable]
32 Bit I/O                           [Disable]
Transfer Mode:                        [Fast PIO4]
Ultra DMA Mode:                       [Mode 2]

```

Secondary Master Information		BIOS default	BIOS value
Type		Auto	
Multi-Sector Transfers			
LBA Mode Control			
32 Bit I/O			
Transfer Mode			□ □ □ □ □ □ □ □
Ultra DMA Mode			

[illegible]

■ Onboard Devices Configuration Menu

- [Advanced]-

----- OnBoard Device Configuration -----

Serial Port: [Enabled]
Base I/O Address: [3F8]
Interrupt: [IRQ 4]

Parallel Port: [Enabled]
Mode: [Bi-directional]
Base I/O Address: [37B]
Interrupt: [IRQ 7]

Onboard Devices Configuration Menu		
	BIOS default	BIOS value
Serial Port	Enabled	Disabled
Base I/O Address	3F8	2F8/ 3E8/ 2EB
Interrupt	IRQ 4	IRQ 3
Parallel Port	Enabled	Disabled
Mode	Bi-directional	ECP/ Output only
Base I/O Address	37B	27B/ 3BC
Interrupt	IRQ 7	IRQ 5

Serial Port: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Base I/O Address: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Interrupt: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Parallel Port: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Mode: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Base I/O Address: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Interrupt: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

■ Security Menu

- Information - Main - Advanced - [Security] - Boot - Exit -

Set Supervisor Password [Enter]
Set User Password [Enter]

Password on boot: [Disabled]

Set Primary Hard Disk Password [Enter]

- I/O Security

USB [Enabled]
Audio [Enabled]
IEEE1394 [Enabled]
Modem [Enabled]
Serial Port [Enabled]
Parallel Port [Enabled]
Legacy Diskette A [Enabled]

Security Menu		
	BIOS default	BIOS value
Set Supervisor Password		Enter
Set User Password		Enter
Password on boot	Disabled	Enabled
Set Primary Hard Disk Password		Enter
USB	Enabled	Disabled
Audio	Enabled	Disabled
IEEE1394	Enabled	Disabled
Modem	Enabled	Disabled
Serial Port	Enabled	Disabled
Parallel Port	Enabled	Disabled
Legacy Diskette A	Enabled	Disabled

Set Supervisor Password: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Set User Password: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

☐ ☐ [Supervisor Password] ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

☐ ☐ [User Password] ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

System Time/ System Date/ Boot Display/ Screen Expansion/ User Password
/ Exit/ Saving Changes/ Exit/ Discarding Changes/ Discard Changes/ Save Changes

Password on boot: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

☐ ☐ [Supervisor Password] ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Set Primary Hard Disk Password: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

USB: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Audio: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

IEEE1394: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Modem: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Serial Port: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Parallel Port: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Legacy Diskette A: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

■ Boot Menu

- Information - Main - Advanced - Security - [Boot] - Exit -

Boot Priority from SS [Normal]

▼ Boot Sequence

Boot Menu		
	BIOS default	BIOS value
Boot Priority from SS	Normal	LAN
Boot Sequence		[Boot Sequence] <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>

Boot Priority from SS: ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

[Normal: Boot Sequence] ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

[LAN: SS] ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Boot Sequence: [Boot Sequence] ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

■ Boot Sequence ()

<p>----- [Boot] -----</p> <p>Boot Sequence -----</p> <p>#Renovable Devices</p> <p>CD ROM Drive</p> <p>#Hard Drive</p>

Removable Devices
CD-ROM Drive
Hard Drive

■ Exit Menu (□ □ □ □ □ □)

```
- Information - Main - Advanced - Security - Boot -[Exit]-
Exit Saving Changes
Exit Discarding Changes
Load Setup Defaults
Discard Changes
Save Changes
```

Exit Saving Changes

Exit Discarding Changes

Load Setup Defaults

Discard Changes

Save Changes